FREE015 Tigers clock

By Sue Mey
www.scrollsawartist.com

Use 3/4" to 1" (19 mm to 25 mm) hardwood
Drill blade entry holes and make the inside cuts
Clock insert required: 2 1/2" (65 mm)
Measure the diameter of the back of the clock insert
Place one point of a compass on the center of the cross
and draw the circle for the hole
Drill an entry hole and cut the clock insert hole
Sand the clock and apply finish of choice
Insert the clock
Optional: Cut a base of the same wood
Use a router to make a decorative edge
and mount the clock on the base

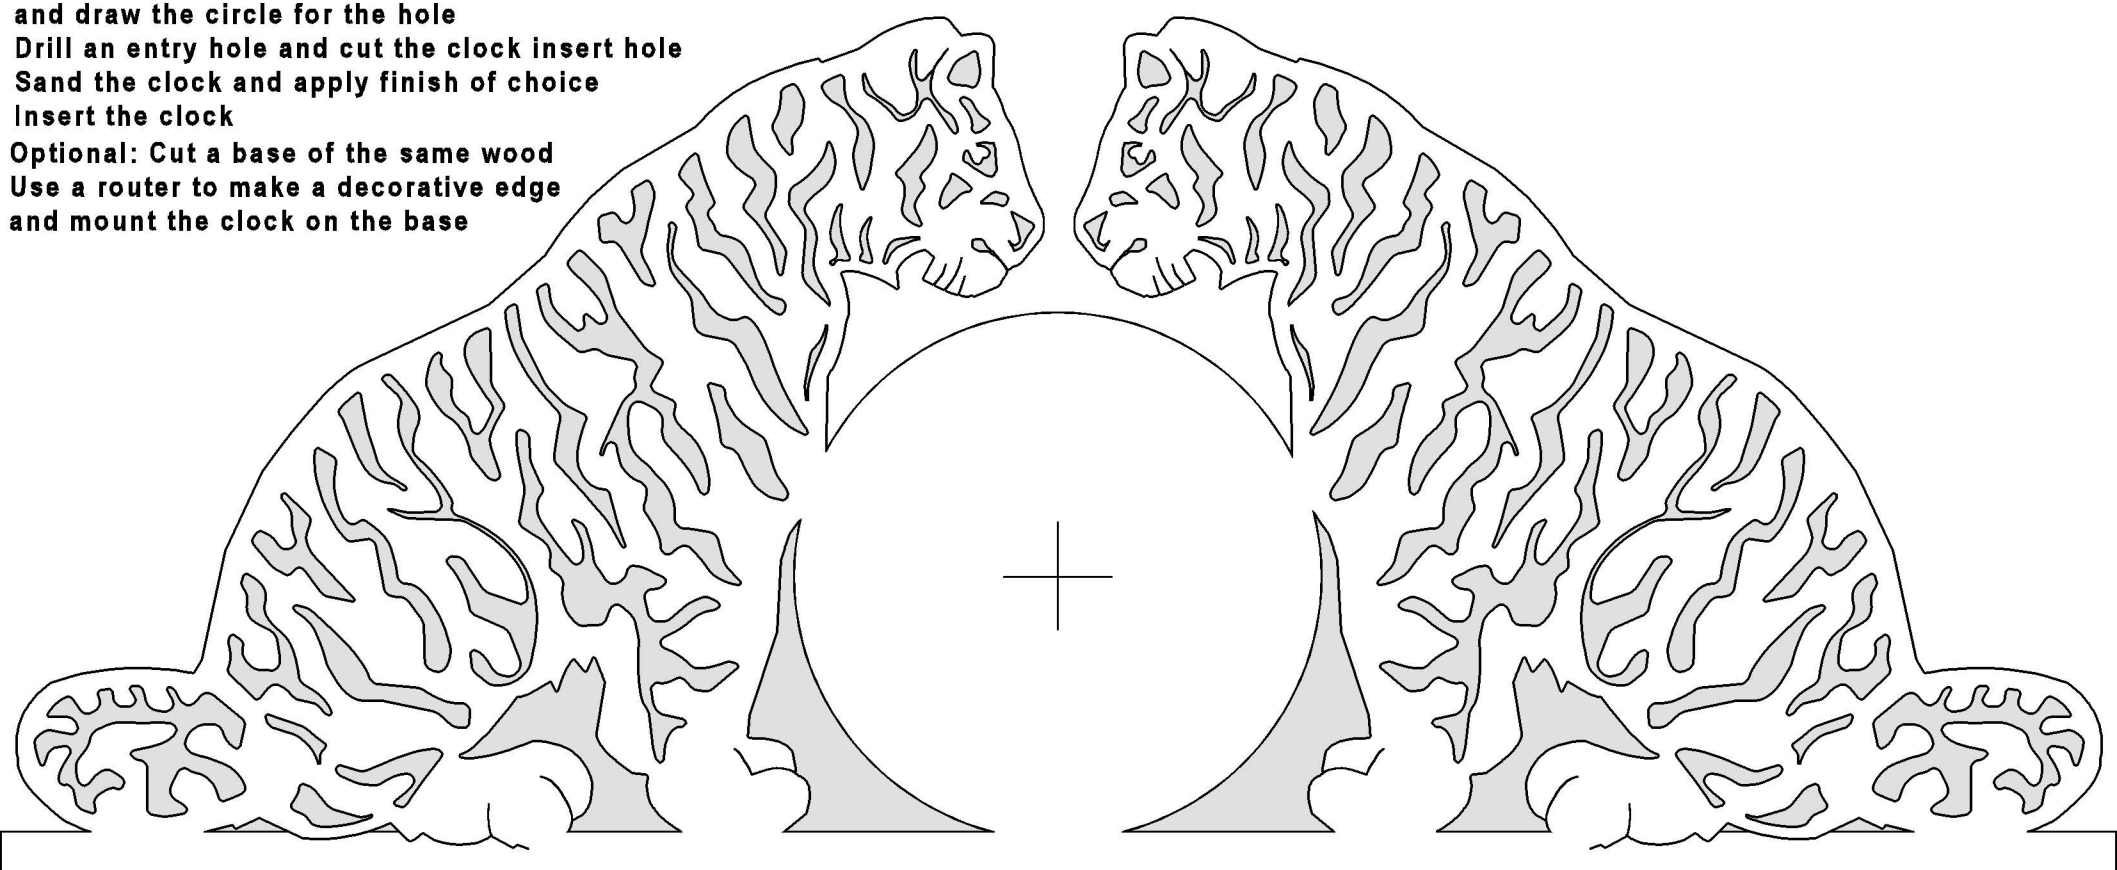

Scrollsawartist.com